



For tech support visit  
[www.kingcaddy.com.au](http://www.kingcaddy.com.au)  
or ring 1300.....

## Spare parts fitting instructions

Part	Right hand clutch assembly
Tools Required	Hammer, 4mm pin punch
Contents	Right hand clutch, axle pin

1. Locate clutch to be replaced. Clutch side is nominated when looking from behind buggy.
2. Remove wheel on clutch side to be changed, by depressing locking tab on wheel and sliding wheel off axle.
3. Use a 4mm Pin Punch to remove the pin securing the clutch to the axle.
4. Slide the clutch off the axle and replace with the new part.
5. Knock in new pin through clutch and axle.
6. Refit wheel using locking tab and ensure wheel is locked onto axle.
7. Correct fitment of clutch allows forward travel but locking of the wheel backwards.