

Spare parts fitting instructions

Part	Suspension springs
Tools required	10mm spanners, small screwdriver

Contents Frame springs

1. Ensure the buggy is folded up.
2. Remove the wheels from the buggy to get better access to the springs
3. Place the buggy on a flat bench the correct way up.
4. Squeeze the main frame down to compress the spring. *Be very careful when doing this. The spring has a lot of force.* Once the spring is compressed, very carefully slide the spring retaining strap back over the frame to release the two frame parts.
5. Remove the old spring and replace with a new spring. *Ensure the new spring fits into the spring retainers properly*
6. Squeeze the frame together and slide the spring retaining strap back onto the frame parts.
7. Repeat for the opposite side spring.
8. Assemble the buggy in reverse order as per above.

