

Spare parts fitting instructions

Part	Universal Joint
Tools Required	6mm Allen Key, adjustable spanner
Contents	Universal joint



1. fold the buggy up and remove the wheels to assist the access to the universal joint.

2. start by undoing the bolt into the universal joint with a 6mm Allen key. Use an adjustable spanner to help hold the body of the universal joint while undoing the bolt.



3. Use the adjustable spanner to undo the universal joint from the top part of the buggy.



4. Remove and replace the universal joint with the replacement part. Tighten the joint into the body of the buggy with the adjustable spanner.

5. Retighten the bolt through the frame into the joint using the adjustable spanner to hold the body of the joint level when tightening.



6. Do not over tighten any of the connections, but ensure they are firm. Loctite or other similar stud lock may help to lock the part in.